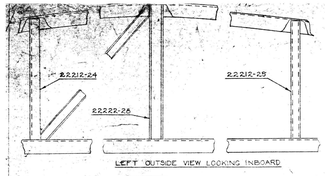

FIG 6
TORQUE CHANNEL INST.
HALF SIZE

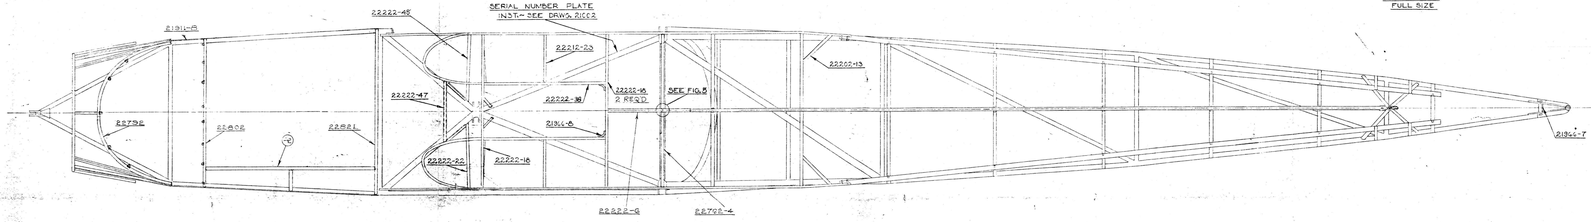



FIG 3
FULL SIZE

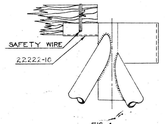

FIG 4
FULL SIZE

SECTION F-F
FULL SIZE



FIG 1
FULL SIZE

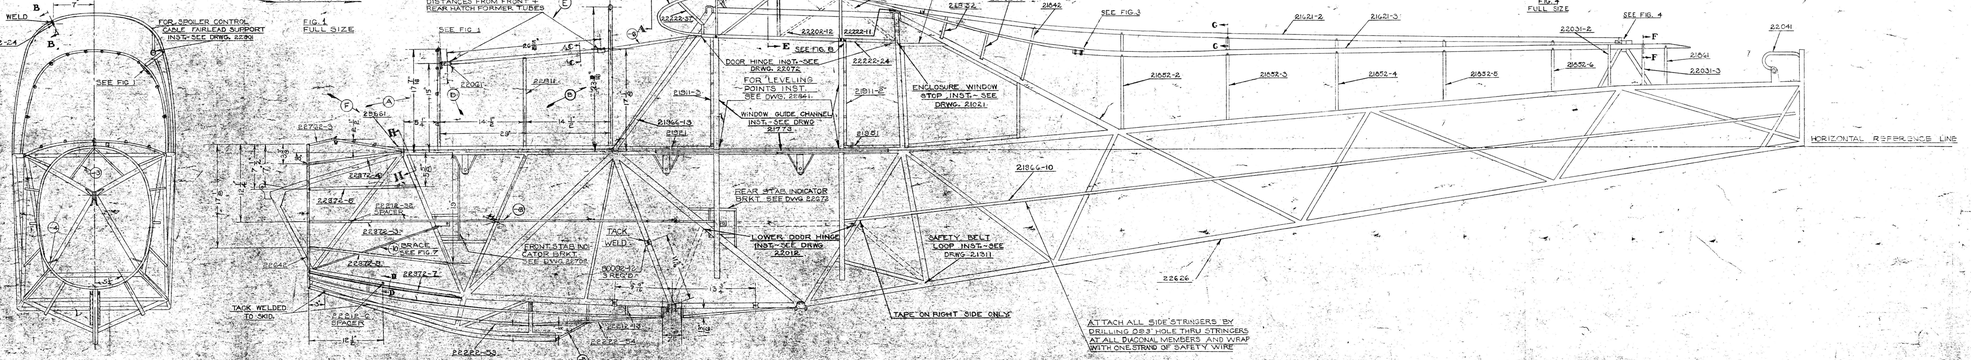

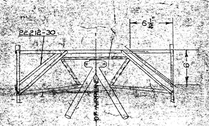



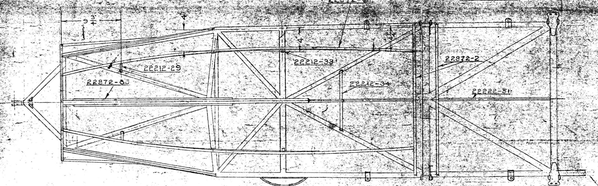





FIG 7
FULL SIZE

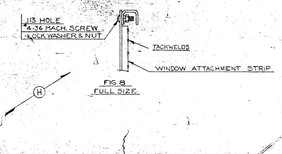

FIG 8
FULL SIZE

NOTES
1. FOR DIMENSIONS & INFORMATION NOT SHOWN, SEE DWG. 21832
2. ALL STRINGER WIRES CONTACTING FABRIC IN CockPIT TO BE COVERED WITH SHORT PIECES OF MASKING TAPE TO PROTECT FABRIC.
3. WELDS INDICATED THUS ⊥ ARE 1/4 IN. TACKWELDS SPACED 2 1/2 IN. APART

4-36	1	SPLING .RDH.6 INCH SCREW
6-36	1	PLAIN NUT
#6	1	LOCK WASHER
	1	3/4 IN. FRICTION TAPE
22076	1	DOOR HINGE INST.
21023	2	CHANNEL
21006	1	NUMBER PLATE INST.
22641	1	LEVELING POINTS INST.
22773-1	1	WINDOW GUIDE CHANNEL INST
22018	1	LOWER DOOR HINGE INST.
21311	1	WINDOW STOP INST.
21311-1	1	SAFETY BELT LOOP INST.
21832-1	1	CHANNEL
22912-3	1	
.040	1	1/16" DIA. WELDING ROD
0.81-3	1	STRIP
081-2	1	STRIP
0.081	1	STRIP
21951	1	STRIP
.063	1	3/4" DIA. WELD ROD
AN525-6	6	CLAMP
-8	1	AN2019 .065 STEEL TUBE
22206-1	1	CHANNEL
21811-1	2	
21-624	1	FUSELAGE FRAME
	30	AN470AD4 BRASS RIVET
#4	4	WOOD SCREW
21841-9	2	RIGGING
21841-7	1	
22041	2	FAIRING
22231-3	2	FORMERS
22206-2	1	
21846	2	REINF.
21-1-10	1	GUSSET
21844-10	2	
21811-3	6	STRINGER
22673-1	1	
22224-1	1	
22673-2	1	
22224-2	2	
22222-38	2	
22222-39	2	
22222-37	1	
222224	2	
22222-33	2	
22222-34	2	
22222-35	2	
22222-36	2	
22222-37	2	
22222-38	2	